


Measure Distance

You can use this function to view the distance between any two points in the drawing area.

1. Click Measure Distance, and then select two points that you want to measure. You can select points successively. Right-click to show the total length, as shown below.

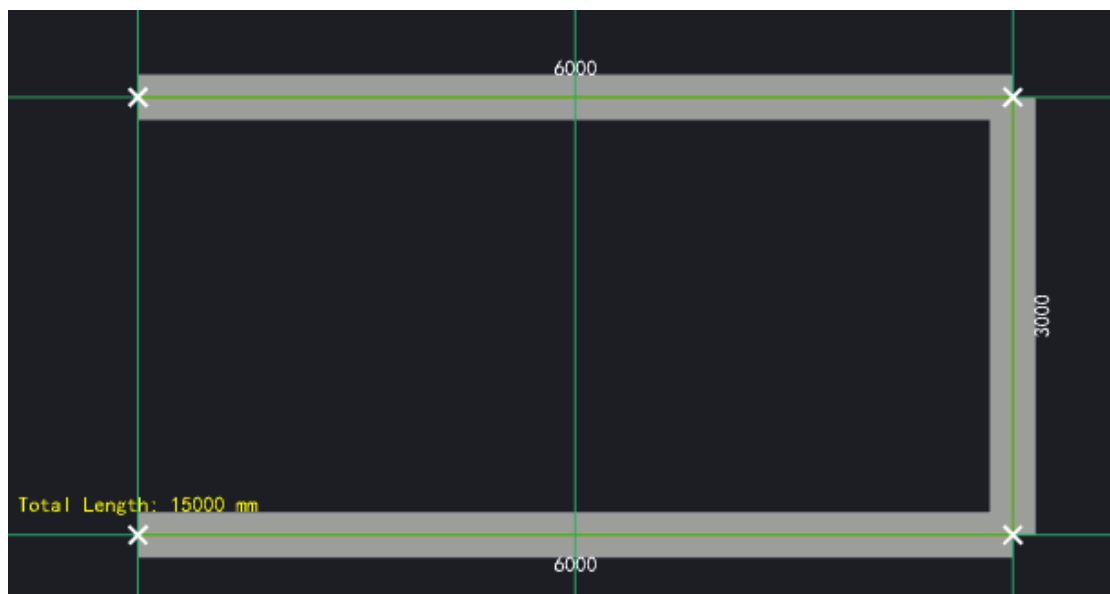

2. To exit measuring, right-click again.