


Extend Edge


When calculating volumes and formwork areas of slabs, it is required to calculate to the edges of walls and beams. You can use this function to extend slabs to the edges of walls and beams when drawing entities, to make sure that the quantities are calculated correctly.

1. Click Extend Edge, and then select the slab entities that you want to extend.

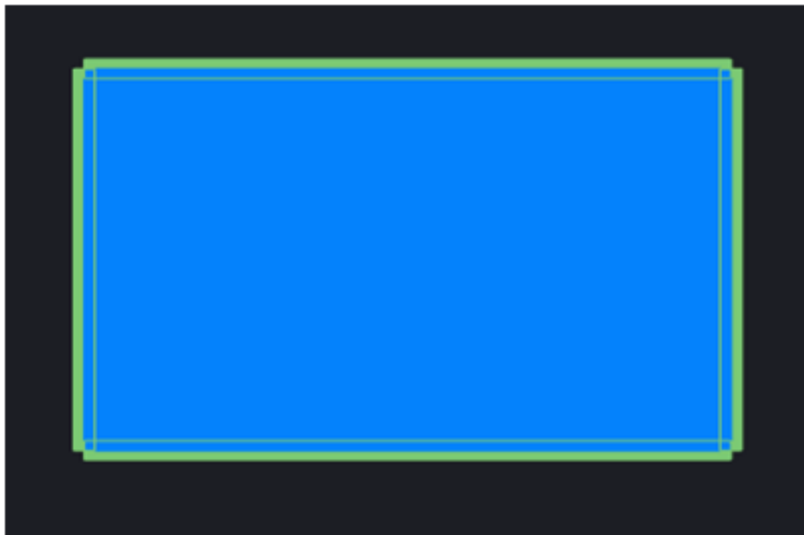

2. Right-click to confirm

Cubicost- TAS C

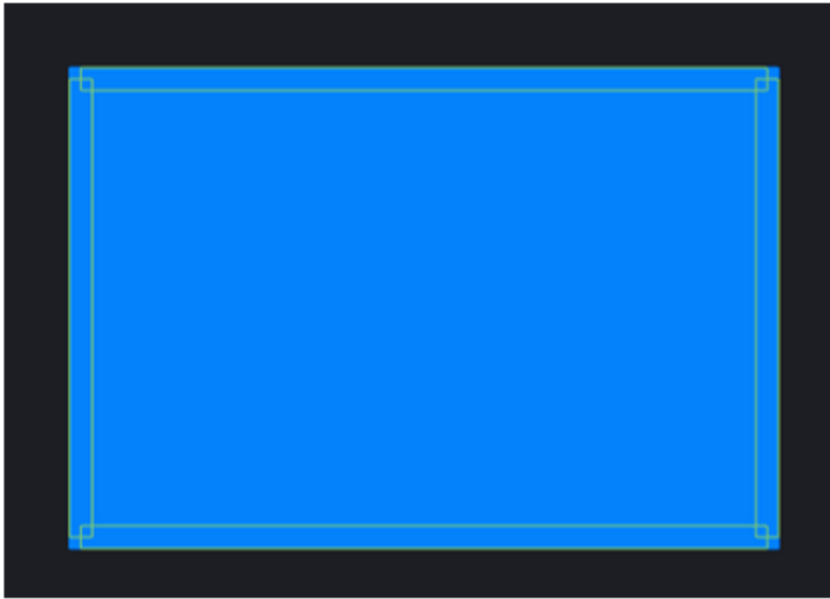

Note

1. Extend Edge is available for both in-situ and precast slabs.
2. The beam type includes beam and coupling beam.
3. When slabs are intersecting with both walls and beams, and the widths of beams and walls are different, the slabs will extend by the largest width.