


Show/Swap Direction

Show Direction

The function helps to view the drawing direction of linear entities.

Click **Show Direction**, and the direction of the drawn linear entities will be shown in the drawing area.

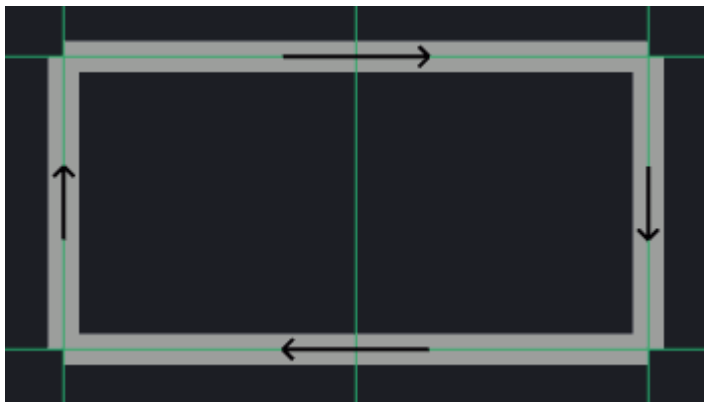

Swap Direction

This function helps to modify the drawing direction of a drawn linear element.

Click **Swap Direction**, select the entity that you want swap direction, and then right-click to confirm.