

Check Non-Enclosed Area and Check Non-Enclosed Area by Floor


Check Non-Enclosed Area

If there are no enclosed area in the project, you can use this function to locate the entities not forming enclosed areas rapidly.

1. Click **Check Non-Enclosed Area**.
2. Drag-select the area that you want to check, and then right-click to confirm.

In the following window, the non-enclosed area is marked.

Cubicost- TAS C

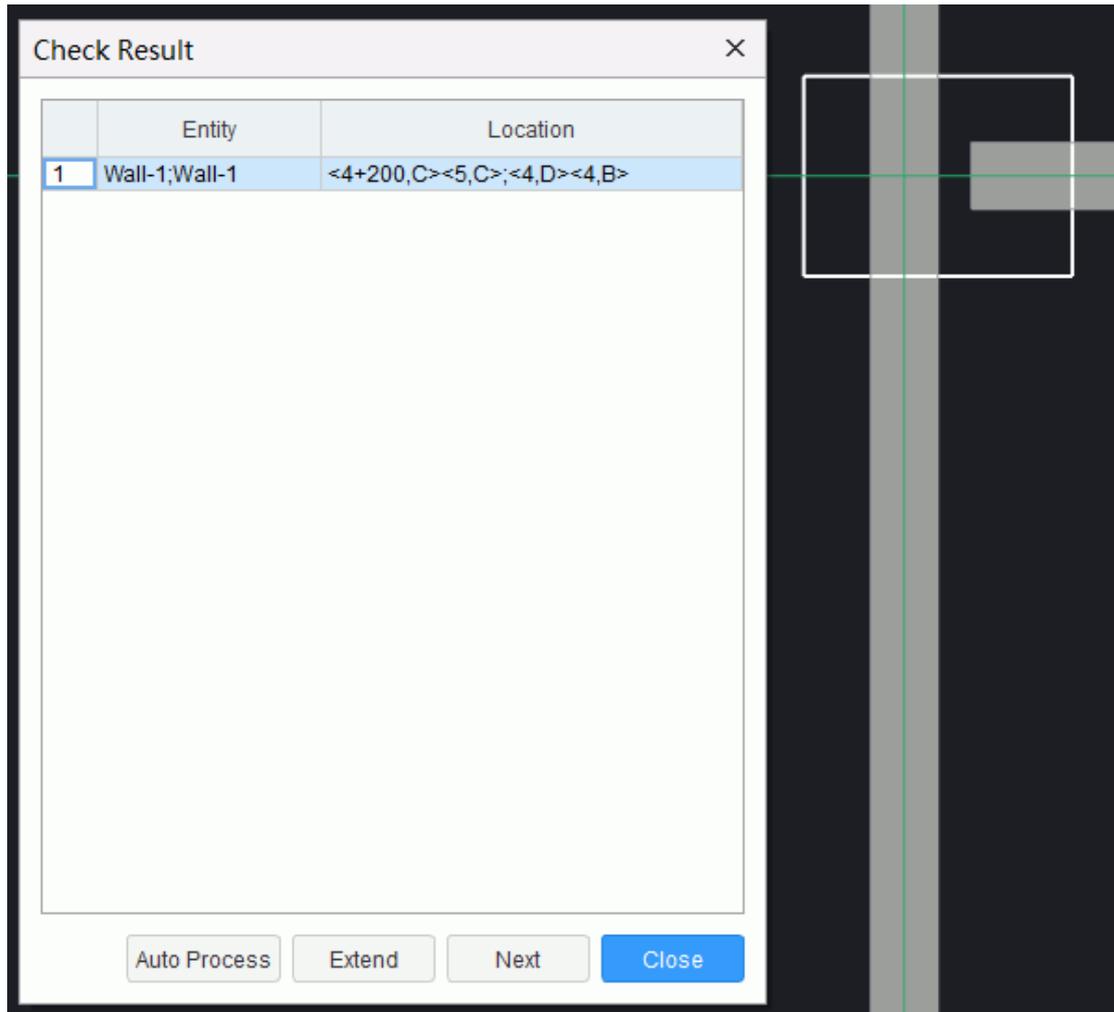

3. In the Check Result window, the location of the non-enclosed entity is listed.

Double-click the entity name to automatically locate the entity.


4. To extend entities in batches, click **Auto Process**. To extend the selected entity, click **Extend**. To go to next entity, click **Next**.

Note

Click Welcome > Options > Others, and then you can adjust the value for

Non-enclosed Area Settings: Maximum extension at gaps to form


intersections. By default, the value is 500, that is, you can find all gaps with a length less than 500mm at intersections.

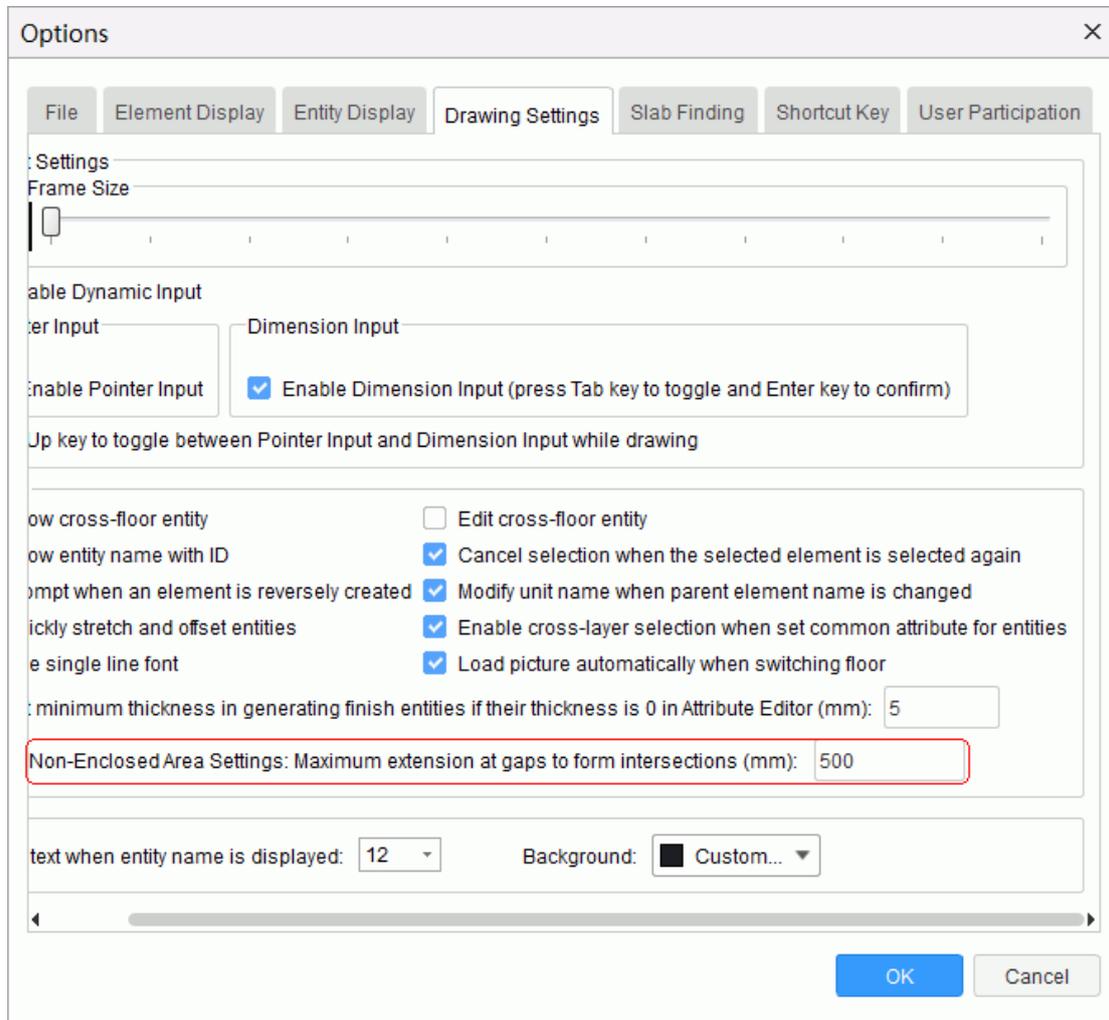


Check Non-Enclosed Area by Floor

1. Click **Check Non-Enclosed Area by Floor**.

Cubicost- TAS C

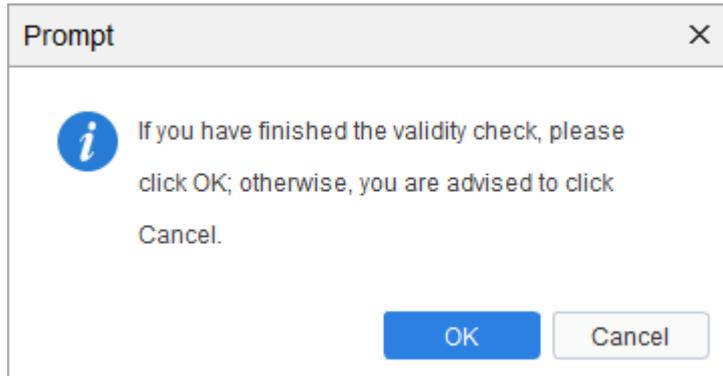

2. Click **OK**, and then in the following window, select the floors and element types as needed.

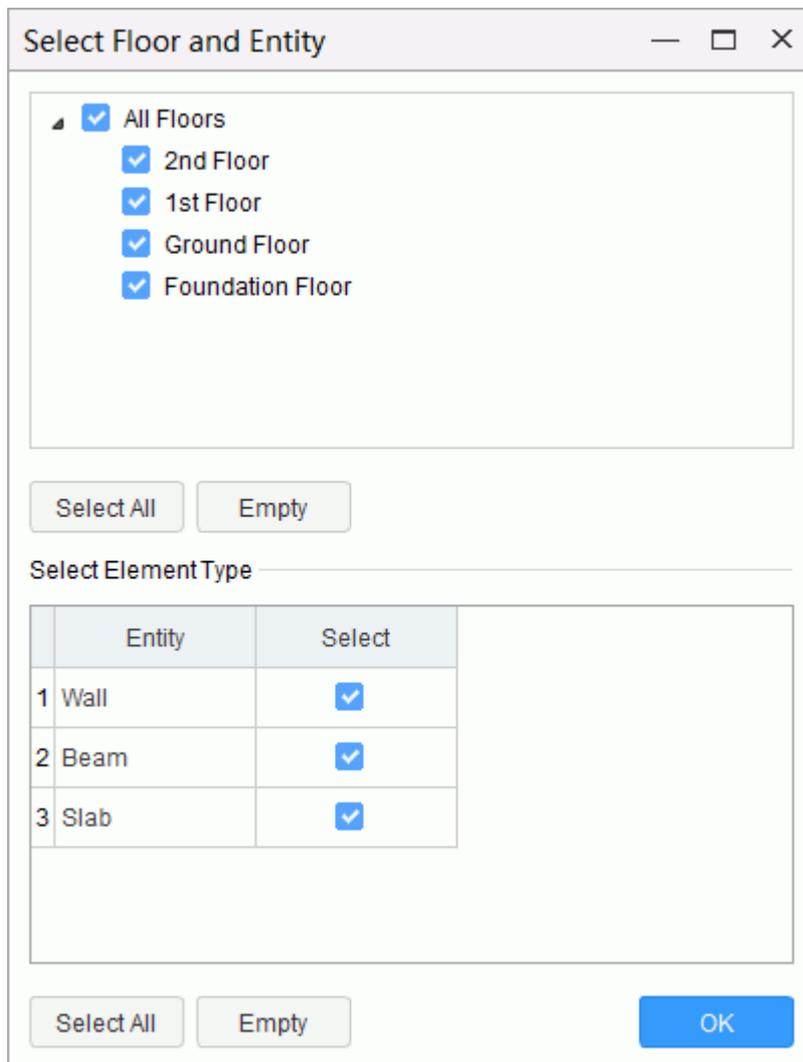

Cubicost- TAS C

3. Click **OK**, and In the **Check Result** window, double-click the entity name to automatically locate the entity.
4. To extend entities in batches, click **Auto Process**. To extend the selected entity, click **Extend**. To go to next entity, click **Next**.