


Set Slope Coefficient (Heavy Excavation)


In actual constructions, if the depth of excavating exceeds a specific height, it is necessary to set slopes. You can use this function to deal with that.

1. Click Set Slope Coefficient, and on the toolbar, select the setting method and enter the slope coefficient. You select all edges or multiple edges to slope.

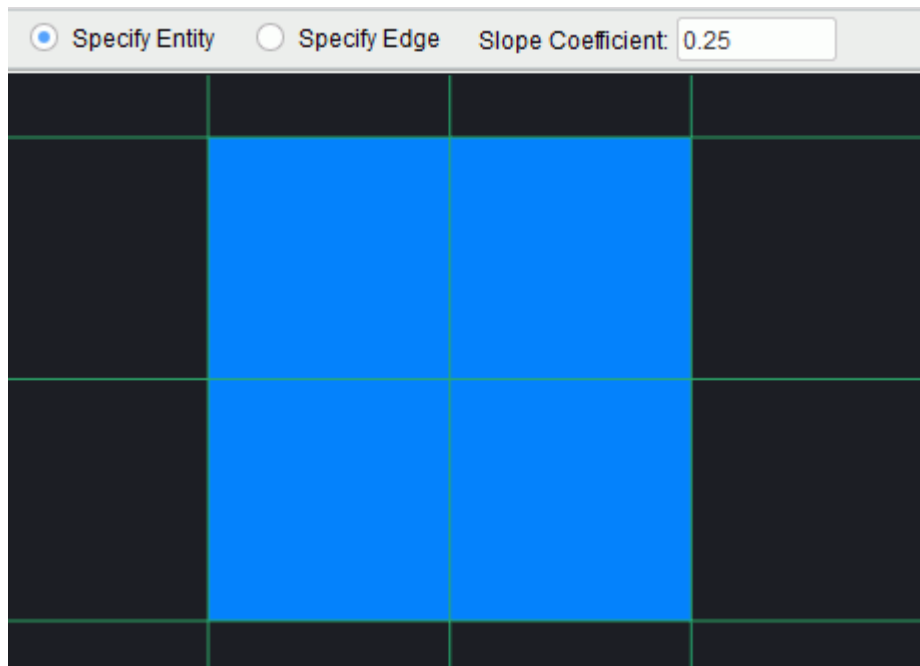

2. Select the entity that you want to set, and then right-click to confirm.
3. The slopes are set successfully.

Cubicost- TAS C

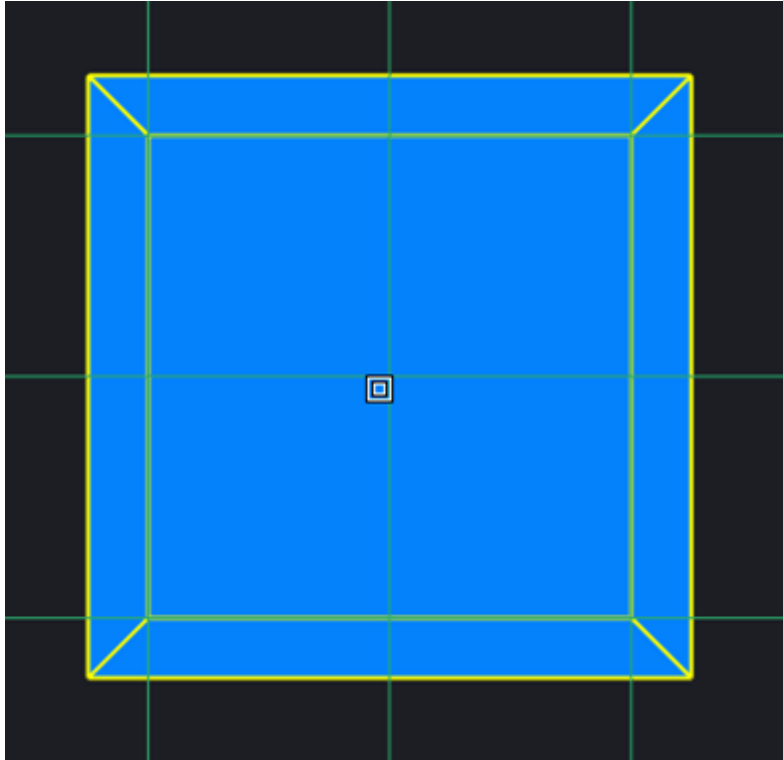

Note

This function is available for heavy excavations and pit excavations.

Function Application

Set Slope Coefficient Function can be applied by heavy excavation.