
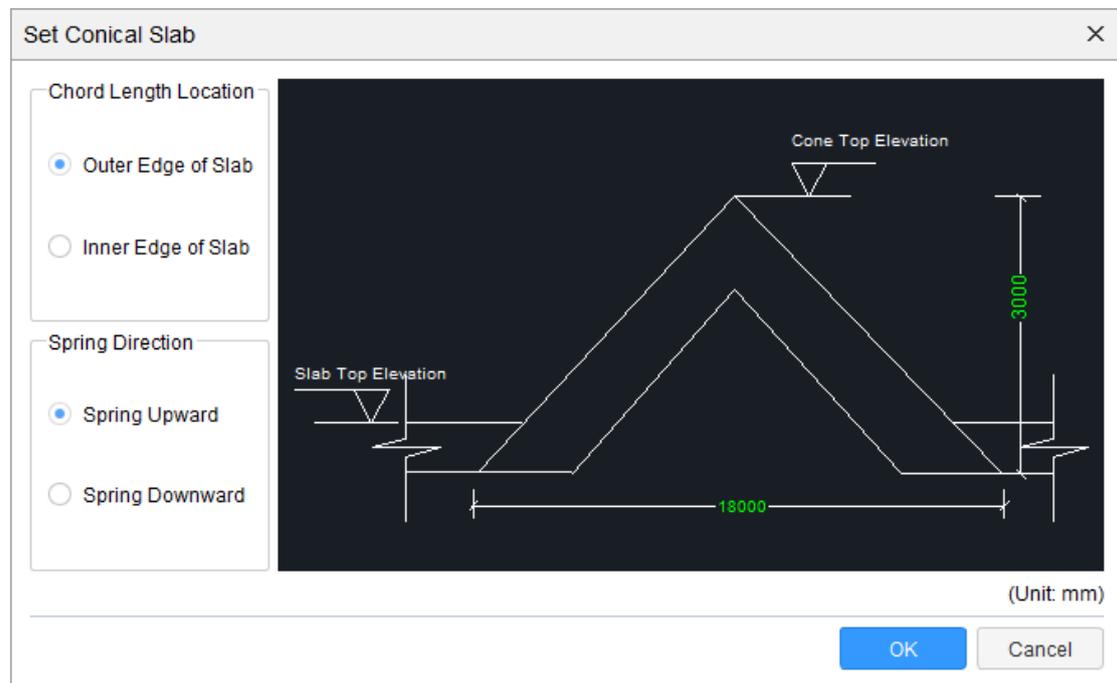



Set Conical Slab

1. Click **Set Conical Slab**, and then select the slab entity that you want to set.
2. Click to specify the center.
3. Select the chord length location and spring direction, and then enter arching data.

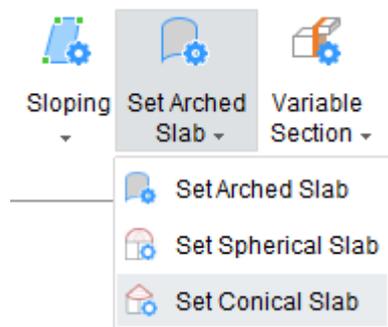

4. Click **OK**.

Cubicost- TAS C

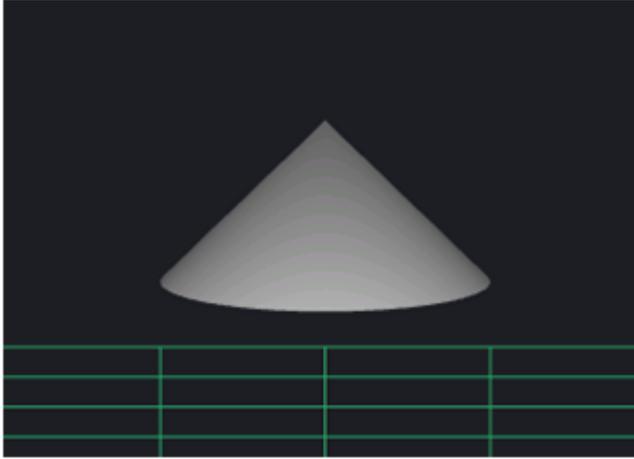

4. Click **OK**.

Note

1.Sloping is available for both in-situ and precast slabs.

2.If you change the arching method,the diagram will change accordingly.