


Align with Slab and Align with Roof

Align with Slab

In drawing actual projects, if you meet a sloping slab, you can use this function to adjust the walls, columns and beams to the location of the slab.

1. Click **Align with Slab** or Select the entities
2. Select the entities that you want to align, and then right-click to confirm or Click **Align with Slab**.

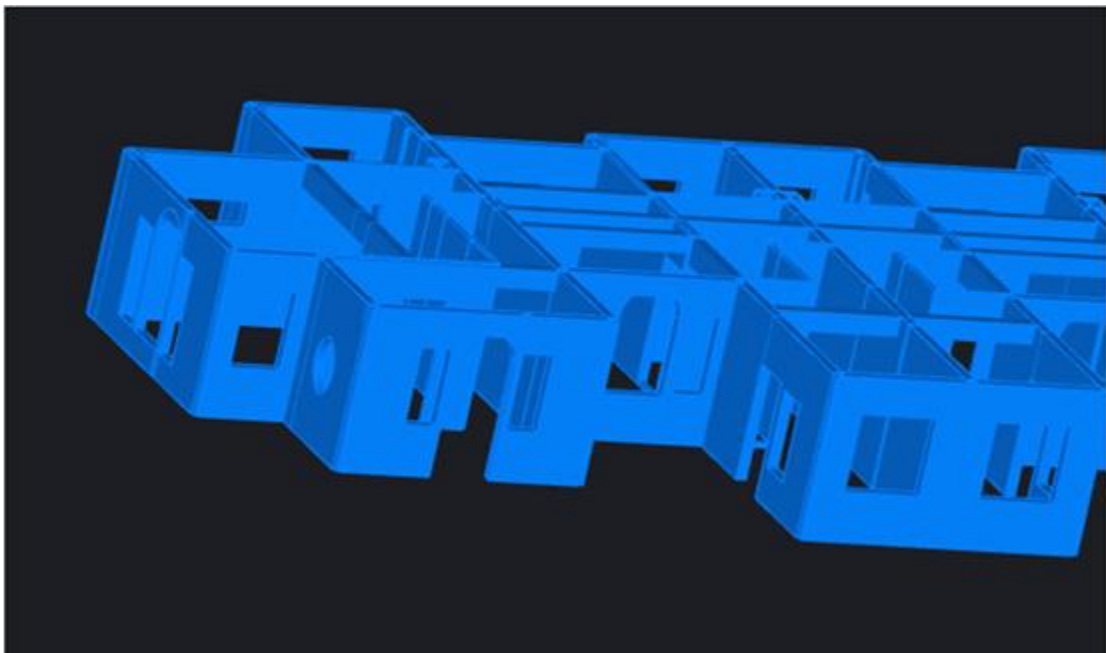


2. Select the slab entity that you want to align with, and right-click to confirm.
(You can right-click to confirm directly, and then the slab can be found automatically.)

Cubicost- TAS C



3. In the following dialog box, click **OK**.

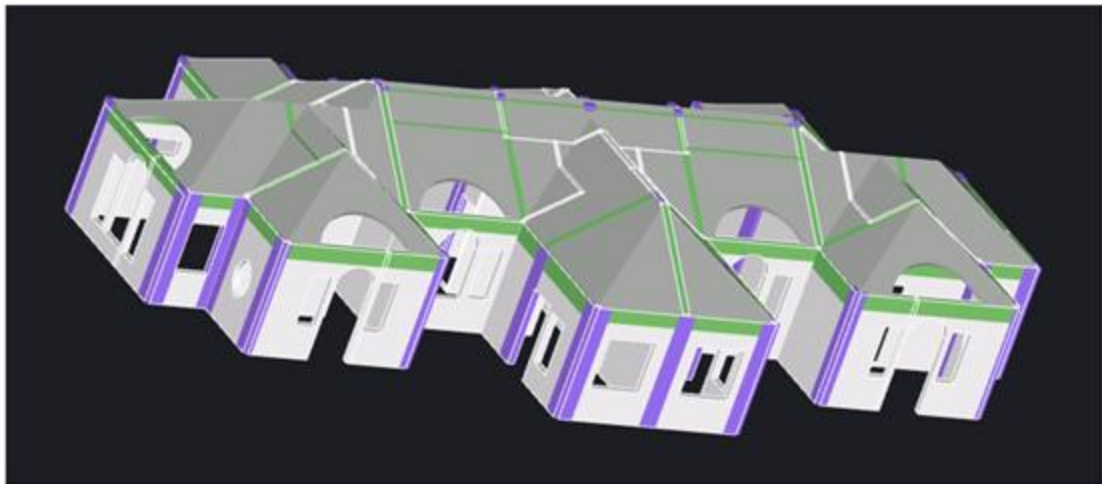

Note

1. You can refer to Slab Finding settings for the range of slab alignment. When performing Align with Slab, the slabs in the range of alignment are displayed automatically.

Align with Roof

When drawing actual projects, if you meet a sloping roof, you can use this function to adjust walls, columns and beams to the location of the roof.

Cubicost- TAS C

1. Click **Align with Roof**, select the wall, column and beam entities that you want to align, and then right-click to confirm.
2. Select the roof entity that you want to align with, and then right-click to confirm.
3. In the following dialog box, click **OK**.

