



## Floor Display

To view multiple floors, you can use this function. TAS supports the display of Current Floor, Adjacent Floors, Whole Building and Custom Floor.

### 1. Current Floor Display

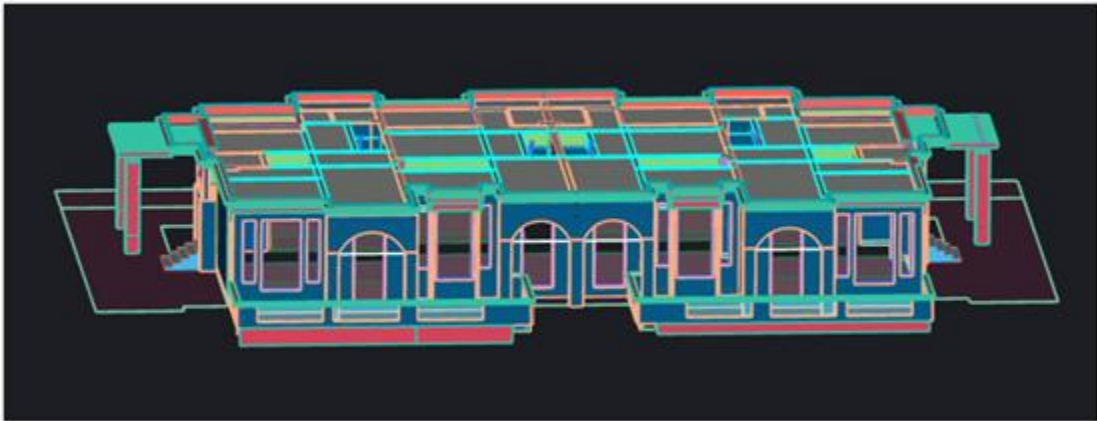

### 2. Whole Building Display

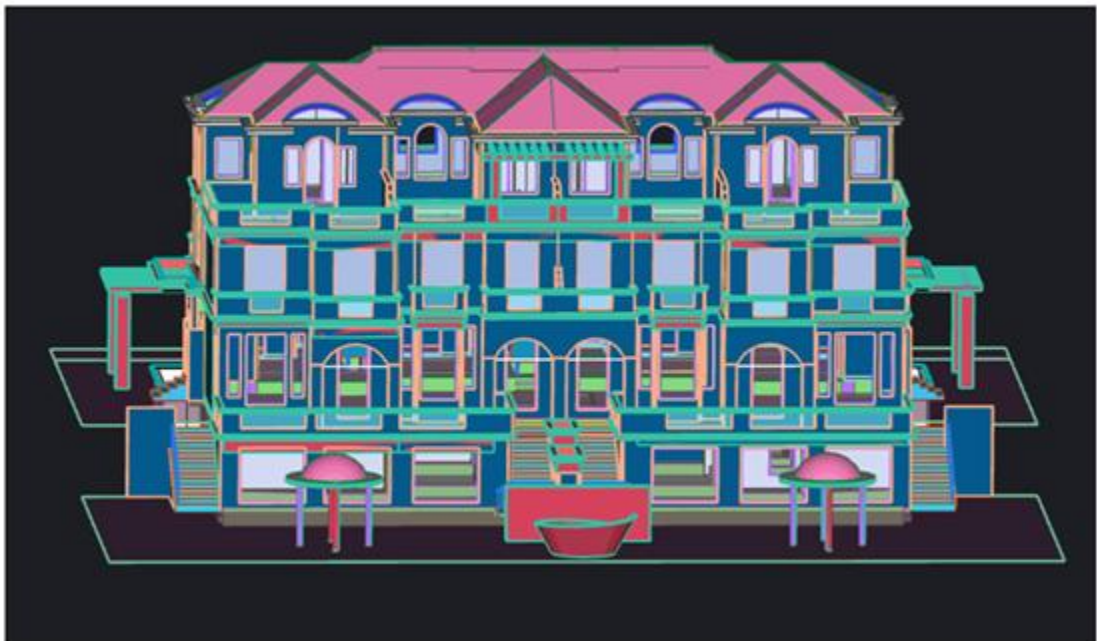

## Cubicost- TAS C

---

### **Note**

To display a random floor, click Custom Floor, and then select the floor manually.