

## Show Other Floor and Zone

### Show Other Floor


If your project has many zones, you may need to refer to entity positions in other zones when drawing in the current zone and you can use this function then.

1. Click **Show Other Floor**, and the **Entity Display Settings** of Other Floor dialog box appears.
2. Select the floor and the entities in it you want to display and click OK, so the corresponding entities in the checked floor appears in the current floor.

### Show Other Zone

If your project has many zones, you may need to refer to entity positions in other zones when drawing in the current zone and you can use this function then.

## Cubicost- TAS C

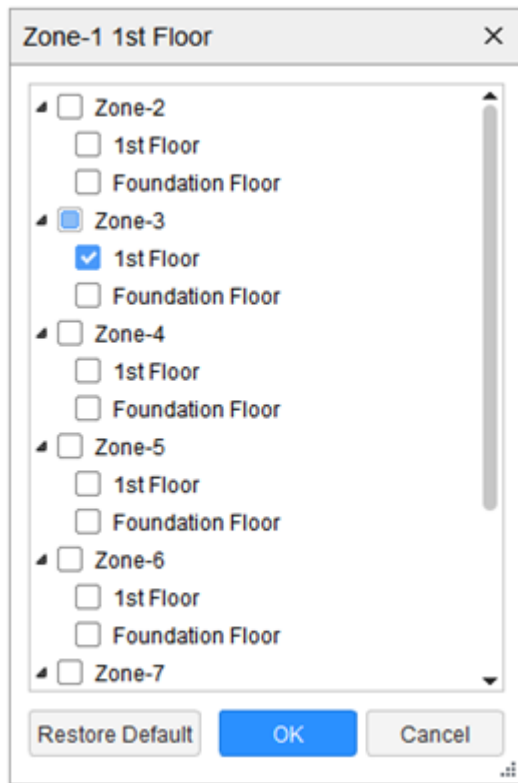

2. Select the check box for the floor you want to display, so the entities of the selected floor appears in the current zone.