

Reversely-Check Quantity in BQ

To facilitate check and adjustments, after associating quantities with BQ items, if you want to view the sources of the quantities, you can use this function.

1. Select a details row under BQ item.
2. Click **Reversely-Check Quantity**.
3. In the **View Quantity by Category** window, the corresponding cell will be highlighted.

The screenshot shows the 'View Quantity by Category' window. The main table has the following data:

Classification Condition						Quantity		
Floor	Material	Concrete Grade	Entity Type	Thickness	Name	Volume(m3)	Area of Formwork(m2)	Length of Formwork Edge and Edge in Stages(0.1~)(m)
			Curved	240	RCwall-240	7.777	77.117	
2	Ground Floor	In-situ Concrete	Vertical	120	RCwall-120	8.925	135.740	
3				240	RCwall-240	159.137	1360.075	
4 Total						175.838	1572.932	

Below the table, there are controls: Show Subtotal, Filter Associated Item, and Reversely-Check Model.

Note

1. Support performing Reversely-Check Quantity consecutively.
2. After reversely-checking to the quantity from BQ, you can continue to reversely-check the quantity to the model by using Reversely-Check Model.