


Set Floor Range

Set up floors of reports you want to view uniformly.

1. In the **Report** module, click **Set Floor Range**, and the following window appears.

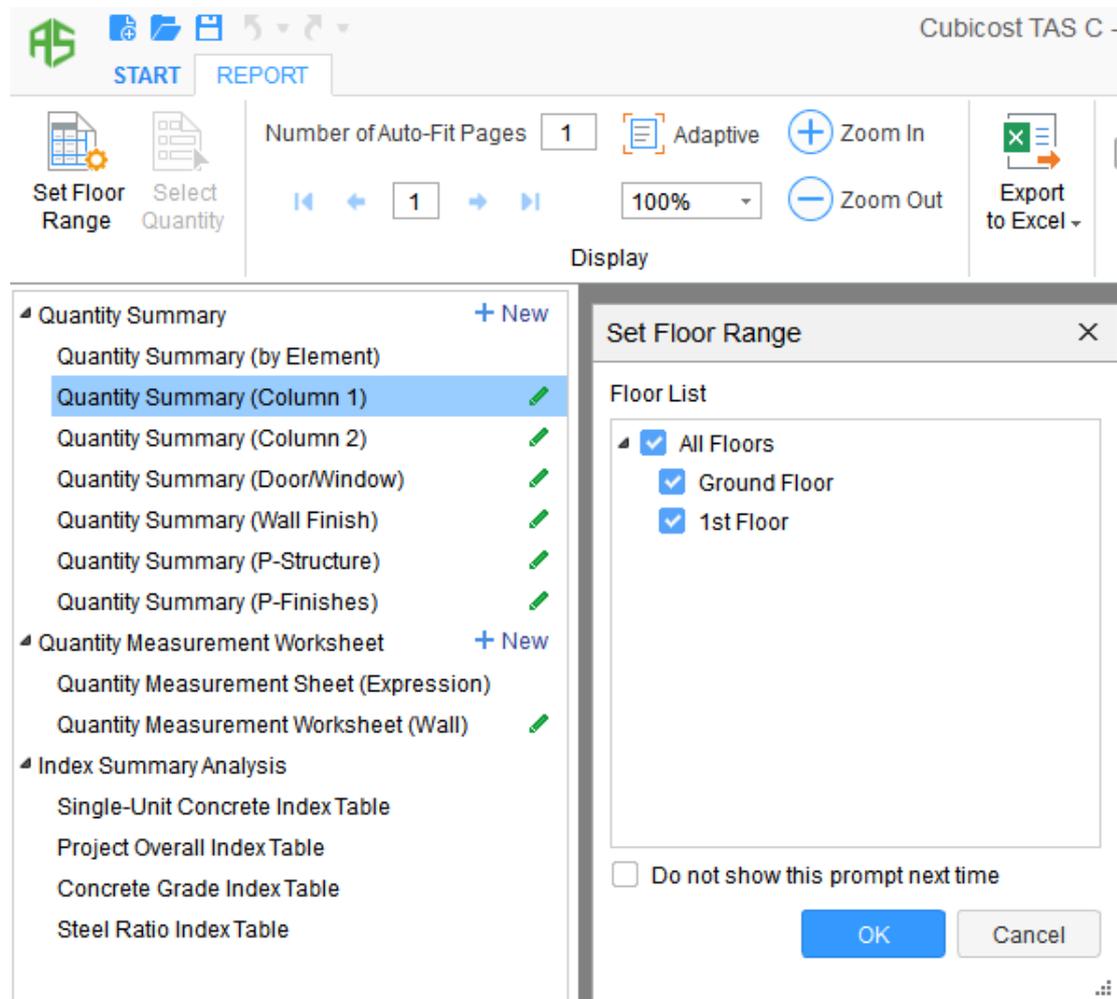

2. Select the check boxes of the floors you want to use.

Cubicost- TAS C

3. Click **OK**, and the report content will appear according to the settings above.